


# Haier

## OPERATION MANUAL SPLIT TYPE ROOM AIR CONDITIONER

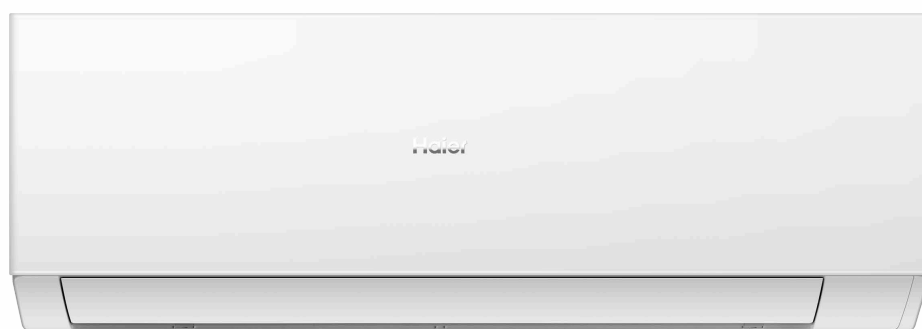

AS09PCEHRA	AS25QCEHRA
AS12PCEHRA	AS35QCEHRA
AS18PDEHRA	AS50QDEHRA
AS24PEEHRA	AS71QEEHRA
	AS90QFDHRA


- Please read this operation manual before using the air conditioner.

Keep this operation manual for future reference

This appliance is filled with R32.

0011522030



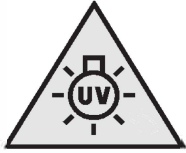

This appliance contains a UV-C lamp.

---


## WARNING:

---


- Read the maintenance instructions before opening the appliance.
- Eye or skin irritation may result from exposure from top air inlet and inner part. During air filter taking and putting for maintenance, please make sure that the power is cut off before approaching the product.
- UV-C barriers bearing the ultraviolet radiation hazard symbol should not be removed.
- Appliances that are obviously damaged must not be operated.
- Do not operate UV-C lamps outside of the appliance.
- The appliance must be disconnected from the power supply before replacing or cleaning or other maintenance of the UV-C lamp.
- The type of UV-C lamp is 0011012908A.
- Front panels bearing the ultraviolet radiation hazard symbol which have UV-C radiation are provided with a switch to interrupt the power to the UV-C lamps for your safety. Do not over-ride switch by magnet and other similar material.
- Before opening front panels bearing the ultraviolet radiation hazard symbol for the conducting user maintenance, it is recommended to disconnect the power.
- If the UV-C lamp is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Unintended use of the appliance or damage to the housing may result in the escape of dangerous UV-C radiation. UV-C radiation may, even in small doses, cause harm to the eyes and skin.

# Parts and Functions

## Indoor Unit

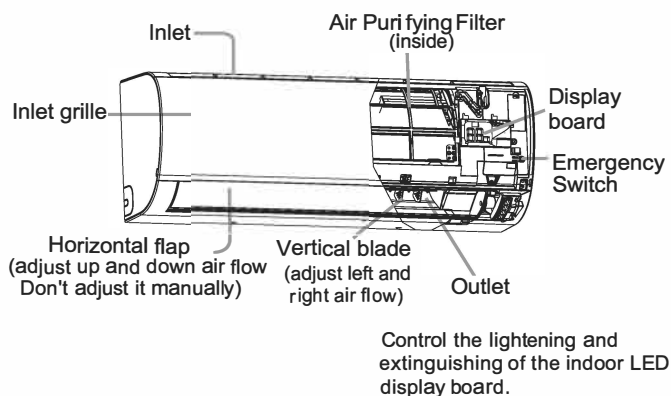


### Display board

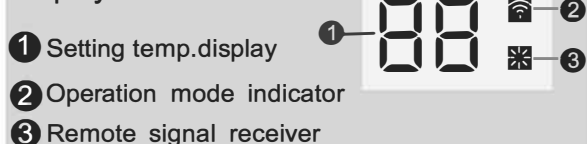

Actual inlet grille may vary from the one shown in the manual according to the product purchased


## Outdoor Unit

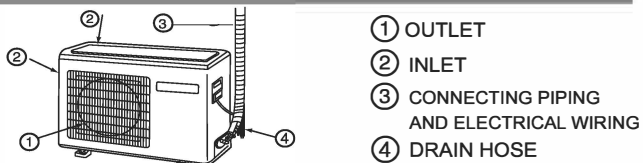


## WiFi Setup

If your Air Conditioner (AC) has a Connected Appliance Information label located under the front cover as shown below, your AC is WiFi Connect Enabled. A WiFi communication card is built into the product allowing it to communicate with your smart phone for remote monitoring, control and notifications.

Please visit [www.haier.com.au/smart](http://www.haier.com.au/smart) or [www.haier.co.nz/smart](http://www.haier.co.nz/smart) to learn more about connected appliance features, and to learn what connected appliance apps will work with your smart phone.

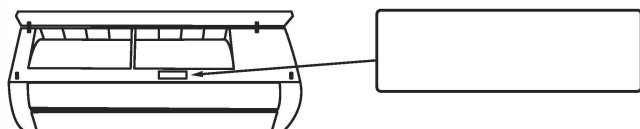

## Remote controller

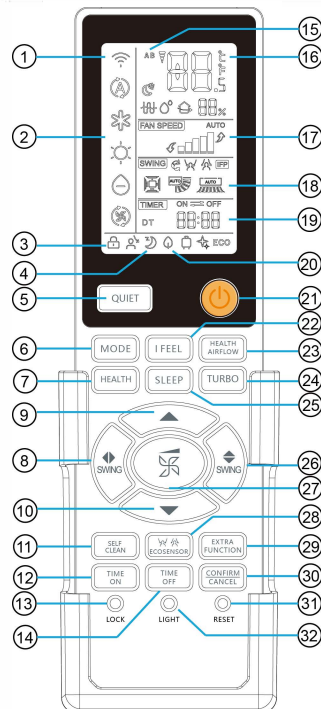

1.Signal display

2.Mode display

3.Lock display

4.Sleeping display

5.QUIT button

6.MODE button

Function: COOL→HEAT→DRY  
→FAN→AUTO

7.HEALTH button(UV-C lamp starts working)

8.SWING Left/Right button

9. TEMP "+" button

10. TEMP "-" button

11.SELF CLEAN button

12.TIME ON button

13.LOCK button

14.TIME OFF button

15.A/B yard

16.Temp display

17.Fan Speed display

18.Swing display

Swing Up/Down display

Swing Left/Right display

19.Time on display

Time off display

Clock display

20.Health display

21.POWER ON/OFF button

22.IFEEL button

23.HEALTH AIRFLOW button

24.TURBO button

25.SLEEP button

26.SWING Up/Down button

27.FAN SPEED button

28.ECO-SENSOR button

29.EXTRA FUNCTION button

Function: A/B yard→10°C  
Heating→F°C switch

30.CONFIRM CANCEL button

Function: Setting and cancel to  
the timer and other additional  
functions.


31.RESET button

32.LIGHT button

### NOTE:

Cooling only unit do not have displays and functions related with heating  
If the unit which you purchased has healthy function, follow it. If not, please ignore

## Loading of the battery

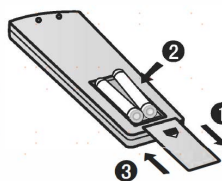

1 Remove the battery cover;

2 Load the batteries as illustrated.  
2 R-03 batteries, resetting key  
(cylinder); Be sure that the loading  
is in line with the "+" / "-" ;

3 Load the battery, then put on the  
cover again.

### Note:

- The distance between the signal transmission head and the receiver hole should be within 7m without any obstacle as well.
- When electronic-started type fluorescent lamp or change-over type fluorescent lamp or wireless telephone is installed in the room, the receiver is apt to be disturbed in receiving the signals, so the distance to the indoor unit should be shorter.
- Full display or unclear display during operation indicates the batteries have been used up. Please change batteries.
- If the remote controller can't run normally during operation, please remove the batteries and reload several minutes later.

# Operation

## Unit start / stop

### Remote controller

#### 1. Unit start

Press ON/OFF on the remote controller, unit starts.

#### 2. Select operation mode

COOL : Refrigeration mode  
HEAT : Heating mode  
DRY : Dehumidification mode  
FAN : Air supply mode  
AUTO: Automatic mode

#### 3. Select temp.setting

 
Press ▲ / ▼ button

- ▲ Every time the button is pressed, temp.setting increase 1°C, if kept depressed, it will increase rapidly
  - ▼ Every time the button is pressed, temp.setting decrease 1°C, if kept depressed, it will decrease rapidly
- Select a desired temperature.

#### 4. Fan speed selection

Press FAN button. For each press, fan speed changes as follows:

Remote controller:



Air conditioner is running under displayed fan speed. When FAN is set to AUTO, the air conditioner automatically adjusts the fan speed according to room temperature.

Operation Mode	Remote Controller	Note
AUTO		Under the mode of auto operation, air conditioner will automatically select Cool or Heat operation according to room temperature. When FAN is set to AUTO, the air conditioner automatically adjusts the fan speed according to room temperature.
COOL		Cooling only unit do not have displays and functions related with heating.
DRY		In DRY mode, when room temperature becomes lower than temp. setting+2°C, unit will run intermittently at LOW speed regardless of FAN setting.
HEAT		In HEAT mode, warm air will blow out after a short period of the time due to cold-draft prevention function.
FAN		In FAN operation mode, the unit will not operate in COOL or HEAT mode but only in FAN mode. AUTO is not available in FAN mode. And temp. setting is disabled. When FAN is set to AUTO, the air conditioner automatically adjusts the fan speed according to room temperature. In FAN mode, SLEEP operation is not available.

## Air Flow Direction Adjustment

### 1. Up and down air flow direction

For each press of SWING button, air flow direction on remote controller displays as follows according to different operation modes:

COOL/DRY/FAN:

AUTO:

HEAT:

### 2. Left and right air flow adjustment

For each press of SWING button, remote controller displays as follows : remote controller:



### Cautions:

- When adjusting the flap by hand, turn off the unit.
- When humidity is high, condensate water might occur at air outlet if all vertical louvers are adjusted to left or right.
- It is advisable not to keep horizontal flap at downward position for a long time in COOL or DRY mode, otherwise, condensate water might occur. When restart after remote turning off, the remote controller will automatically return to the previous set swing position.

## DRED Operation

(This function is unavailable on some models.)

Haier Peaksmart enabled air-conditioners have a Demand Response Mode display on the indoor unit.

The display could be labelled d1, d2, d3 (wording may differ model to model).

These modes are described in more detail below:

Mode	Display	Description	What to do
DRM3	d3	Your air-conditioner will continue to cool or heat during the peak demand event. The energy consumed by your air-conditioner is capped to 75%.	No action is required.
DRM2	d2	Your air-conditioner will continue to cool or heat during the peak demand event. The energy consumed by your air-conditioner is capped to 50%.	No action is required.
DRM1	d1	Your air-conditioner is still turned on and the fan will continue to operate. Your compressor is turned off and cool/hot air will no longer be generated.	DRM1 mode is only activated during emergency demand management situations. This mode will automatically reset the device within 2 hours. If your air-con is in this mode for longer than 2 hours please contact Energex on 13 12 53.




 
# Operation

## ■ Timer On/Off On-Off Operation

1.After unit starts, select your desired operation mode.

2.Press  /  button to change TIMER

Press  button "TIMER ON " will appear ,after 10 seconds the time display will be blank.

Press  button "TIMER OFF " will appear ,after 10 seconds the time display will be blank.

Then select your desired TIMER mode (TIME ON or TIME OFF ). " ON "or " OFF "will flash.

3.Press  /  button to set time.

Each press will increase or decrease 1min. If the button is kept pressed, time will change quickly.

4.Confirm timer setting

After adjust the time,press  button and confirm the time ON or OFF button will not flash any more.

5.Cancel timer setting

Press the  button the time display eliminated.

### Hints:

After replacing batteries or a power failure happens, time setting should be reset.

According to the Time setting sequence of TIME ON or TIME OFF, either Start-Stop or Stop-Start can be achieved.


## ■ Self Clean Operation

◆Functional description: the purpose of this function is to clean the evaporator and condenser.


◆Entry and exit: Press self clean button to enter this function, then it will display "CL" on the panel of the indoor unit and also on the remote controller. After running 20-30 minutes, this function will exit automatically when the " Pi " sound is heard twice, then the unit returns to original state. Under operation process of self clean, pressing the button repeatedly has no effect and the function will not exit, but pressing the power off button and other mode button can make it exit.

## ■ TURBO/QUIET Operation

1.TURBO Operation

When you need rapid heating or cooling, you can choose the TURBO function. Press TURBO button, the remote controller will show , and then achieve to the TURBO function. Press again this TURBO button , the TURBO function will be cancelled.

2.QUIET Operation

You can use this function when silence is needed for rest or reading. Press QUIET button, the remote controller will show , and then achieve to the quiet function. Press again this QUIET button , the quiet function will be cancelled.

### Note :

During POWER operation, in rapid COOL mode , the room will show inhomogeneous temperature distribution.

Long period QUIET operation will cause effect of not too cool or not too warm.

## ■ Emergency operation and test operation

### Emergency Operation:

- Use this operation only when the remote controller is defective or lost.
- When the emergency operation switch is pressed,the" Pi "sound is heard once, which means the start of this operation.
- In this operation, the system automatically selects the operation modes,cooling or fan or heat,according to the room temperature.



Room temperature	Operation mode	Designated temperature	Timer mode	Air flow
ABOVE 23°C	COOLING	26°C	NO	AUTOMATIC
BELOW 23°C	HEAT	23°C	NO	AUTOMATIC


(Cooling only unit) Room temperature	Operation mode	Designated temperature	Timer mode	Air flow
BELOW 23°C	FAN	26°C	NO	AUTOMATIC

- It is not possible to operate in dry mode.

### Test operation:




Test operation switch is the same as emergency switch.

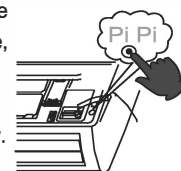- Use this switch in the test operation when the room temperature is below 16 ℃ , do not use it in the normal operation.
- Continue to press the test operation switch for more than 5 seconds. After you hear the "Pi" sound twice, release your finger from the switch: the cooling operation starts with the air flow speed "Hi".
- After 30 minutes, test operation ends automatically.



# Operation
 
## Comfortable SLEEP


Press  button, the remote controller will show , and then achieve to the sleep function. Press again this  button, the sleep function will be cancelled.



### Operation Mode


#### 1. In COOL, DRY mode

1 hour after SLEEP mode starts, temp will become 1°C higher than temp setting. After another 1 hour, temp rises by 1°C further. The unit will run for further 6 hours then stops. Temp is higher than temp setting so that room temperature won't be too low for your sleep.

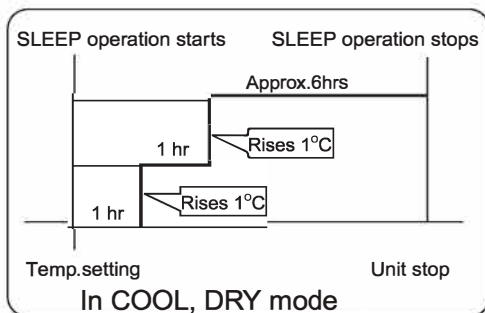

#### 2. In HEAT mode

1 hour after SLEEP mode starts, temp will become 2°C lower than temp setting. After another 1 hour, temp decrease by 2°C further. After more another 3 hours, temp rises by 1°C further. The unit will run for further 3 hours then stops. Temp is lower than temp setting so that room temperature won't be too high for your sleep.

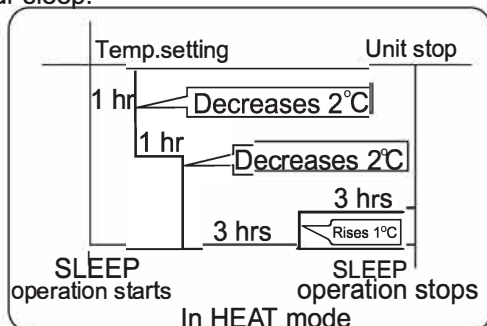

#### 3. In AUTO mode

The unit operates in corresponding sleep mode corresponding sleep mode adapted to the automatically selected operation mode.

#### 4. In FAN mode

It has no SLEEP function.

5. When comfortable sleeping function is set to 8 hours the comfortable sleeping time can not be adjusted. When TIMER function is set, the comfortable sleeping function can't be set up. After the sleeping function is set up, if user resets TIMER function, the sleeping function will be cancelled; the machine will be in the state of timing-on, if the two modes are set up at the same time, either of their operation time is ended first, the unit will stop automatically, and the other mode will be cancelled.

### Note

When TIMER function is set, the sleeping function can't be set up. After the sleeping function is set up, if user resets TIMER function, the sleeping function will be cancelled; the machine will be in the state of timing-on.


#### Power Failure Resume Function


If the unit is started for the first time, the compressor will not start running unless 3 minutes have elapsed. When the power resumes after power failure, the unit will run automatically, and 3 minutes later the compressor starts running.

 
## Healthy Airflow Operation

1. Press  to starting

Setting the comfort work conditions.

2. The setting of healthy airflow function 

1) Press the button of health airflow,  appears on the display. Avoid the strong airflow blows direct to the body.

2) Press the button of health airflow again,  appears on the display. Avoid the strong airflow blows direct to the body.

3. The cancel of the healthy airflow function

Press the button of health airflow again, both the inlet and outlet grills of the air conditioner are opened, and the unit goes on working under the condition before the setting of airflow function. After stopping, the outlet grille will close automatically.

### Note:

1. After setting the healthy airflow function, the position grill is fixed.

2. In cooling, it is better to select the  mode.

3. In cooling and dry, using the air conditioner for a long time under the high air humidity, condensate water may occur at the grille.


## LIGHT Button

Control the lightening and extinguishing of the indoor LED display board.

# Operation

## ■ HEALTH Operation

(This function is unavailable on some models.)



Press HEALTH button, the remote controller will show  and then achieve to the health function. When cancel the function, please press again this HEALTH button. UV sterilization function: it uses the c-band with the most effective sterilization effect in ultraviolet radiation to remove harmful micro-organisms such as bacteria in the air, which has remarkable effects to make the air healthy.

### Attention:

1. It is recommended to turn on the UV sterilization function for 1-2 hours in one day, longer time will affect the life of the UV lamp.
2. Do not look directly at the UV lamp or touch it with your hand when the sterilizing function is on. Please turn off the sterilizing function before opening the panel.
3. Tinged blue light may appear near the air conditioning inlet when the sterilizing function is on.
4. Only when the internal fan starts and health function turned on, the UV lamp will be lighted.

## ■ I FEEL Operation

(This function is unavailable on some models.)

 
1. Only for cooling, heating or auto mode (other modes cannot be implemented).
2. Place the remote controller within the acceptable range of air conditioner. Press the "  " button, the remote control displays the "  " icon. The remote controller sends the circulation temperature data to the indoor unit every 3 minutes, and the air conditioner runs according to this data.
3. Exit "I FEEL" mode when power off or press the "I FEEL" button or switch other modes.

Note: This function is unavailable on some models: AS25QCEHRA; AS35QCEHRA; AS50QDEHRA; AS71QEEHRA; AS90QFDHRA

## ■ ECO-SENSOR Operation

(This function is unavailable on some models.)

Press ECOSENSOR button, For each press, changes as follows:



### NOTE :

A human sensor is used to detect changes in the infrared radiation emitted by human bodies. In case of the following conditions, the detection may not be accurate:

High room temperature, where the ambient temperature is close to body temperature.

People wear a lot or lie on their stomach or back. The speed of human movement exceeds the sensitivity of the sensor.

Frequent movements of pets, or frequent swing of curtains or other indoor objects due to the wind. Moving targets go beyond the detection range of the sensor.

The left and right ends of the indoor unit are installed too close to the wall.

There is direct sunlight inside the room. 54321

The air conditioner operates in a room where ambient temperature fluctuates sharply.

Besides, if a person is at the border of two or three air blowing areas, the following air will be sent to these two areas respectively or be swept automatically. The avoiding air will avoid these two areas or be swept automatically.

Note: This function is unavailable on some models: AS25QCEHRA; AS35QCEHRA; AS50QDEHRA; AS71QEEHRA; AS90QFDHRA

## ■ LOCK Button

Used to lock buttons and LCD display.


## ■ RESET Button

If the remote control is not functioning properly, press this button to reset the remote.


# Maintenance

## For Smart Use of The Air Conditioner

### Setting of proper room temperature

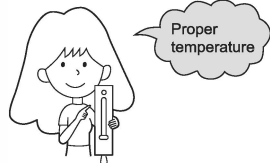

### Do not block the air inlet or outlet

 

### Remote Controller




Do not use water, wipe the controller with a dry cloth. Do not use glass cleaner or chemical cloth.

### Indoor Body




Wipe the air conditioner by using a soft and dry cloth. For serious stains, use a neutral detergent diluted with water. Wring the water out of the cloth before wiping, then wipe off the detergent completely.

### Close doors and windows during operation

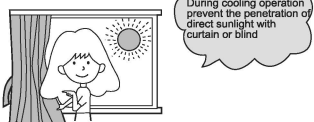

### Use the timer effectively

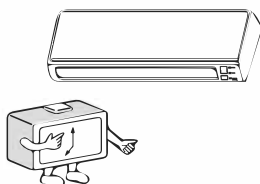

### If the unit is not to be used for a long time, turn off the power supply main switch.



### Use the louvers effectively



### Do not use the following for cleaning



Gasoline, benzene, thinner or cleanser may damage the coating of the unit.



Hot water over 40°C (104°F) may cause discoloring or deformation.

### Air Filter cleaning

1 Open the inlet grille by pulling it upward.

2 Remove the filter.

Push up the filter's center tab slightly until it is released from the stopper, and remove the filter downward.



3 Clean the filter.

Use a vacuum cleaner to remove dust, or wash the filter with water. After washing, dry the filter completely in the shade.

4 Attach the filter.

Attach the filter correctly so that the "FRONT" indication is facing to the front. Make sure that the filter is completely fixed behind the stopper. If the right and left filters are not attached correctly, that may cause defects.

 5 Close the inlet grille.

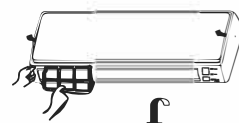

## Replacement of Air Purifying Filter

(NOTE: Air purifying filter is optional part)


### 1. Open the Inlet Grille

Prop up the inlet grille by using a small device named grille-support which located in the right side of the indoor unit.



### 2. Detach the standard air filter

Slide the knob slightly upward to release the filter, then withdraw it.

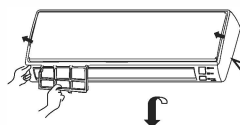


Detach old Air Purifying Filter




### 3. Attach Air Purifying Filter

Put air purifying filter appliances into the right and left filter frames.

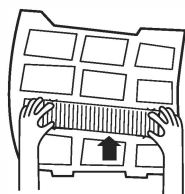

### 4. Attach the standard air filter (Necessary installation)

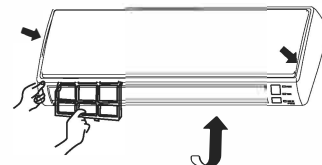

### ATTENTION:

The white side of the photocatalyst air purifying filter face outside, and the black side face the unit.  
The green side of the bacteria-killing medium air purifying filter face outside, and the white side face the unit.

### 5. Close the Inlet Grille

Close the Grille surely

### NOTE:

 

 

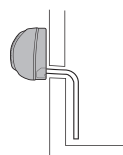


 




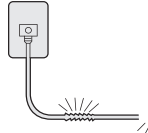

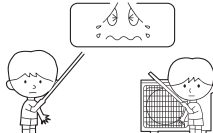





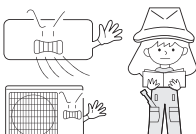
 

- The photocatalyst air purifying filter will be solarized in fixed time. In normal family, it will be solarized every 6 months.
- The bacteria-killing medium air purifying filter will be used for a long time, no need for replacement. But in the period of using them, you should remove the dust frequently by using vacuum cleaner or flapping them lightly, otherwise, its performance will be affected.
- Please keep the bacteria-killing medium air purifying filter in the cool and dry conditions avoid long time directly sunshine when you stop using it, or its ability of sterilization will be reduced.

# Cautions



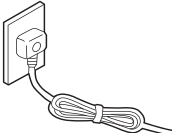

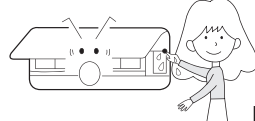

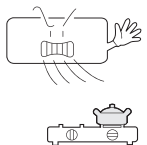

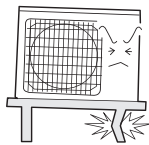

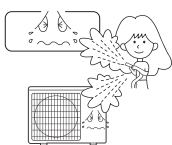

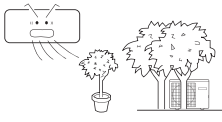



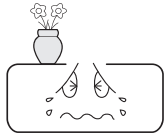

## ⚠ WARNING

Please call Sales/Service Shop for the Installation.  
Do not attempt to install the air conditioner by yourself because improper works may cause electric shock, fire, water leakage.

## ⚠ WARNING

<p>When abnormality such as burnt-small found, immediately stop the operation button and contact sales shop.</p>  <p>OFF</p>  <p><b>STRICT ENFORCEMENT</b></p>		<p>Use an exclusive power source with a circuit breaker</p> 	<p>Check proper installation of the drainage securely</p>  <p><b>STRICT ENFORCEMENT</b></p> 
<p>Connect power supply cord to the outlet completely</p>   <p><b>STRICT ENFORCEMENT</b></p>	<p>Use the proper voltage</p>   <p><b>STRICT ENFORCEMENT</b></p>	<p>1. Do not use power supply cord extended or connected in halfway 2. Do not install in the place where there is any possibility of inflammable gas leakage around the unit. 3. Do not get the unit exposed to vapor or oil steam.</p>  <p><b>PROHIBITION</b></p>	
<p>Do not use power supply cord in a bundle.</p>   <p><b>PROHIBITION</b></p>	<p>Take care not to damage the power supply cord.</p>   <p><b>PROHIBITION</b></p>	<p>Do not insert objects into the air inlet or outlet.</p>   <p><b>PROHIBITION</b></p>	
<p>Do not start or stop the operation by disconnecting the power supply cord and so on.</p>   <p><b>PROHIBITION</b></p>	<p>Do not channel the air flow directly at people, especially at infants or the aged.</p>   <p><b>PROHIBITION</b></p>	<p>Do not try to repair or reconstruct by yourself.</p> 	<p>Connect the earth cable.</p>   <p>earthing</p>

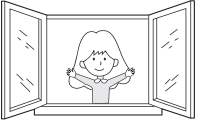




## ⚠ CAUTION

<p>Do not use for the purpose of storage of food, art work, precise equipment, breeding, or cultivation.</p>   <p><b>PROHIBITION</b></p>	<p>Take fresh air occasionally especially when gas appliance is running at the same time.</p>   <p><b>STRICT ENFORCEMENT</b></p>	<p>Do not operate the switch with wet hand.</p>   <p><b>PROHIBITION</b></p>
<p>Do not install the unit near a fireplace or other heating apparatus.</p>   <p><b>PROHIBITION</b></p>	<p>Check good condition of the installation stand</p>   <p><b>PROHIBITION</b></p>	<p>Do not pour water onto the unit for cleaning</p>   <p><b>PROHIBITION</b></p>
<p>Do not place animals or plants in the direct path of the air flow</p>   <p><b>PROHIBITION</b></p>	<p>Do not place any objects on or climb on the unit.</p>   <p><b>PROHIBITION</b></p>	<p>Do not place flower vase or water containers on the top of the unit.</p>   <p><b>PROHIBITION</b></p>



# Trouble shooting

Before asking for service, check the following first.

	Phenomenon	Cause or check points
Normal Performance inspection	The system does not restart immediately. 	<ul style="list-style-type: none"> <li>When unit is stopped, it won't restart immediately until 3 minutes have elapsed to protect the system.</li> <li>When the electric plug is pulled out and reinserted, the protection circuit will work for 3 minutes to protect the air conditioner.</li> </ul>
	Noise is heard 	<ul style="list-style-type: none"> <li>During unit operation or at stop, a swishing or gurgling noise may be heard. At first 2-3 minutes after unit start, this noise is more noticeable. (This noise is generated by refrigerant flowing in the system.)</li> <li>During unit operation, a cracking noise may be heard. This noise is generated by the casing expanding or shrinking because of temperature changes.</li> <li>Should there be a big noise from air flow in unit operation, air filter may be too dirty.</li> </ul>
	Smells are generated.	<ul style="list-style-type: none"> <li>This is because the system circulates smells from the interior air such as the smell of furniture, paint, cigarettes.</li> </ul>
	Mist or steam are blown out. 	<ul style="list-style-type: none"> <li>During COOL or DRY operation, indoor unit may blow out mist. This is due to the sudden cooling of indoor air.</li> </ul>
	In dry mode, fan speed can't be changed.	<ul style="list-style-type: none"> <li>In DRY mode, when room temperature becomes lower than temp. setting+2 °C, unit will run intermittently at LOW speed regardless of FAN setting.</li> </ul>
Multiple check		<ul style="list-style-type: none"> <li>Is power plug inserted?</li> <li>Is there a power failure?</li> <li>Is fuse blownout?</li> </ul>
	Poor cooling 	<ul style="list-style-type: none"> <li>Is the air filter dirty? Normally it should be cleaned every 15 days.</li> <li>Are there any obstacles before inlet and outlet?</li> <li>Is temperature set correctly?</li> <li>Are there some doors or windows left open?</li> <li>Is there any direct sunlight through the window during the cooling operation?(Use curtain)</li> <li>Are there too much heat sources or too many people in the room during cooling operation?</li> </ul>

# Cautions

- Do not obstruct or cover the ventilation grille of the air conditioner. Do not put fingers or any other things into the inlet/outlet and swing louver.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of appliance by person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

## Specifications

- The refrigerating circuit is leak-proof.

The machine is adaptive in following situation

1. Applicable ambient temperature range:

Cooling	Indoor	Maximum:D.B/W.B 32°C/23°C Minimum:D.B/W.B 21°C/15°C
	Outdoor	Maximum:D.B/W.B 46°C/26°C Minimum: D.B -10°C
Heating	Indoor	Maximum:D.B 27°C Minimum: D.B 15°C
	Outdoor	Maximum:D.B/W.B 24°C/18°C Minimum:D.B -10°C
	Outdoor (INVERTER)	Maximum:D.B/W.B 24°C/18°C Minimum:D.B -15°C

- If the power supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similar qualified person.
- If the fuse of indoor unit on PC board is broken, please change it with the type of T. 3.15A/ 250V. If the fuse of outdoor unit is broken, change it with the type of T.25A/250V
- The wiring method should be in line with the local wiring standard.
- After installation, the power plug should be easily reached.
- The waste battery should be disposed properly.
- The appliance is not intended for use by young children or infirm persons without supervision.
- Young children should be supervised to ensure that they do not play with the appliance.
- Please employ the proper power plug, which fit into the power supply cord.
- The power plug and connecting cable must have acquired the local attestation.
- In order to protect the units, please turn off the A/C first, and at least 30 seconds later, cutting off the power.





### For Haier Appliances

Australia 1300 729 948 | [haier.com.au](http://haier.com.au)

New Zealand 0800 424 372 | [haier.co.nz](http://haier.co.nz)

# Haier

Air Conditioning

Important notice of Disclosure: Copyright © Fisher & Paykel Appliances 2019. All rights reserved.  
The product dimensions and specifications in this document apply to the specific products and models described at the date of issue. Under our policy of continuous product improvement, these dimensions and specifications may change at any time. You should therefore check with your dealer or Haier's Customer Care Centre to ensure this flyer correctly describes the products currently available.

Fisher & Paykel Australia Pty Ltd, Level 1, 1 Eden Park Drive, Macquarie Park, NSW 2113.  
Phone Customer Care: 1300 729 948 Email: [customer.care@haier.com.au](mailto:customer.care@haier.com.au)

Fisher & Paykel Appliances Ltd, 78 Springs Road, East Tamaki, Auckland 2013.  
Phone Customer Care: 0800 424 372. Email: [customer.care@haier.co.nz](mailto:customer.care@haier.co.nz)